



Contents

Chapter 1

Introduction. 1-1

System Features	1-1
Supported Operating Systems	1-3
Front Panel	1-4
SCSI Hard-Disk Drive Indicator Codes	1-6
Connecting External Devices.	1-8
Preventing Unauthorized Access to the System	1-9
Power Protection Devices	1-9
Surge Protectors	1-9
Line Conditioners	1-9
Uninterruptible Power Supplies	1-9
Getting Help	1-10
Safety, Regulatory, and Warranty Information	1-10

Chapter 2

Using the Dell OpenManage Server Assistant CD. 2-1

Starting the <i>Dell OpenManage Server Assistant</i> CD.	2-1
Setup Mode	2-1
Service Mode	2-2
Navigating the CD	2-2
Setting Up Your System	2-2
Server Setup Mode	2-2
Utility Partition	2-3
Running the System Diagnostics	2-3
Asset Tag Utility	2-4
Using the Asset Tag Utility.	2-4
Assigning and Deleting an Asset Tag Number.	2-4

Chapter 3 *Installing and Configuring SCSI Drivers 3-1*

Driver Installation for Red Hat Linux 7.x and Windows 2000 3-1

The *SCSISelect* Utility 3-1

SCSISelect Default Settings 3-2

 SCSI Bus Interface Definitions 3-3

 Boot Device Options 3-3

 SCSI Device/Configuration Settings 3-4

 Advanced Configuration Settings 3-5

 Starting the *SCSISelect* Utility 3-7

 Using *SCSISelect* Menus 3-7

 Using the SCSI Disk Utilities 3-7

 Exiting *SCSISelect* 3-7

Troubleshooting for Windows 2000 3-8

Chapter 4 *Using the System Setup Program 4-1*

Entering the System Setup Program 4-1

 Responding to Error Messages 4-2

 Using the System Setup Program 4-2

System Setup Options 4-3

 Main Screen 4-3

 Boot Sequence Screen 4-4

 Hard-Disk Drive Sequence Screen 4-5

 Integrated Devices Screen 4-5

 Console Redirection Screen 4-6

 System Security Screen 4-6

 Exit Screen 4-7

Using the System Password Feature 4-7

 Assigning a System Password 4-8

 Using Your System Password to Secure Your System 4-9

 Deleting or Changing an Existing System Password 4-9

Using the Setup Password Feature 4-10

 Assigning a Setup Password 4-10

 Operating With a Setup Password Enabled 4-11

 Deleting or Changing an Existing Setup Password 4-11

Disabling a Forgotten Password 4-11

Chapter 5 *Installing SCSI Hard-Disk Drives 5-1*

Preparing SCSI Hard-Disk Drives for Installation 5-1

 SCSI Hard-Disk Drive Configuration 5-1

 Partitioning and Formatting SCSI Hard-Disk Drives 5-1

Installing SCSI Hard-Disk Drives 5-2

Configuring the Boot Device 5-3

Appendix A Technical Specifications A-1

Appendix B I/O Ports and Connectors B-1

I/O Ports and Connectors	B-1
Serial Port	B-2
Serial Port Connector	B-3
Keyboard and Mouse Connectors	B-4
Keyboard Connector	B-5
Mouse Connector	B-6
Video Connector	B-7
USB Connectors	B-8
Integrated NIC Connectors	B-9
Network Cable Requirements	B-9

Glossary

Index

Figures

Figure 1-1. Front-Panel Features	1-4
Figure 1-2. SCSI Hard-Disk Drive Indicators.	1-6
Figure 1-3. Back-Panel Features	1-8
Figure 4-1. Main System Setup Screen	4-3
Figure 5-1. SCSI Hard-Disk Drive Carrier	5-2
Figure B-1. Back Panel I/O Ports and Connectors	B-1
Figure B-2. Front Panel I/O Ports and Connectors	B-2
Figure B-3. Pin Numbers for the Serial Port Connectors	B-3
Figure B-4. Pin Numbers for the Keyboard Connector	B-5
Figure B-5. Pin Numbers for the Mouse Connector.	B-6
Figure B-6. Pin Numbers for the Video Connector	B-7
Figure B-7. Pin Numbers for the USB Connector.	B-8
Figure B-8. NIC LEDs	B-10

Tables

Table 1-1. Front Panel LED Indicators	1-5
Table 1-2. SCSI Hard-Disk Drive Indicator Patterns	1-7
Table 2-1. Utility Partition Main Menu Options.	2-3
Table 2-2. Asset Tag Command-Line Options	2-5
Table 3-1. Ultra3 SCSI Controller Settings	3-2
Table 4-1. System Setup Navigation Keys	4-2
Table A-1. Technical Specifications.	A-1
Table B-1. Serial Port Pin Assignments.	B-4
Table B-2. Keyboard Connector Pin Assignments (Back Panel)	B-5

Table B-3.	Keyboard/Mouse Combination Connector Pin Assignments (Front Panel)	B-5
Table B-4.	Mouse Connector Pin Assignments (Back Panel)	B-6
Table B-5.	Mouse/Keyboard Combination Connector Pin Assignments (Front Panel)	B-6
Table B-6.	Video Connector Pin Assignments	B-8
Table B-7.	USB Connector Pin Assignments	B-9

